


TYPICAL GREASE INTERCEPTOR & SAMPLE PORT PIPING LAYOUT

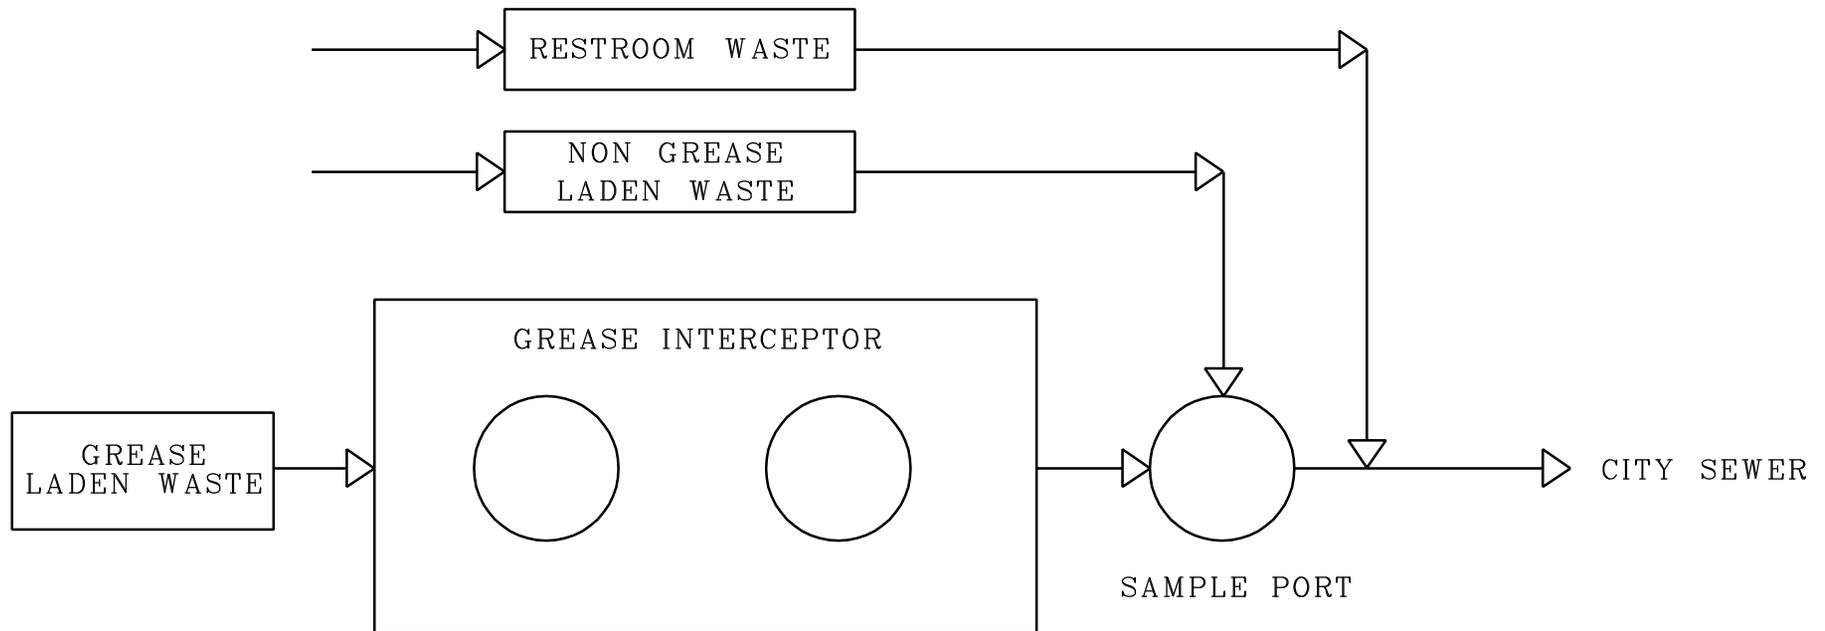

NOTES:

1. The Grease Laden Wastewater line must include a minimum six inch vertical drop in the sample port.
2. The Non Grease Laden Wastewater line must flow through the bottom of the sample port.
3. All wastewater except restroom waste may flow through the grease interceptor.
4. The Sample Port cannot hold water.

NOTES:

For more information please call the Industrial Waste Monitoring & Treatment Office at (806) 775-2626

